



常用接线图示 THE STANDARD WIRES CONTACT DRAWINGS


有Hall传感器内驱型
Hall sensor internal
driver type

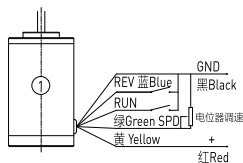


正反转 启停 调速
CW/ CCW, Start/ Stop, Speed Adjust

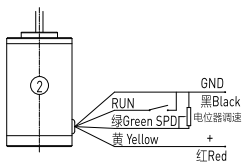


启停 调速
Start/ Stop, Speed Adjust

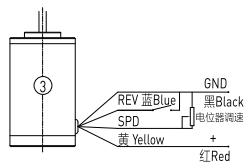


正反转 调速
CW/ CCW, Start/ Stop, Speed Adjust

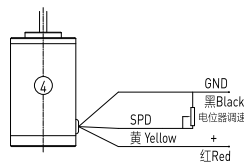


调速
Speed Adjust

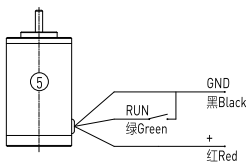


启停
Start/ Stop

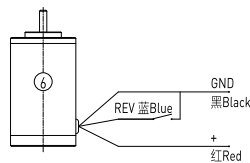

正反转
CW/ CCW

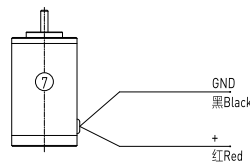


有Hall传感器外驱型
Hall sensor outer
driver type

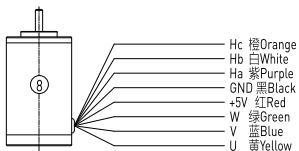

有位置
Hall Type

无Hall传感器外驱型
No hall sensor outer
driver type

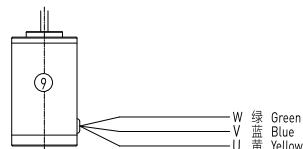

无位置
No Hall Type